



The electrical equipment contained in this box should not be disposed of in unsorted municipal waste but collected separately. This is intended to reduce the impact on the environment by minimising the level of waste generated at the end of a product's useful life by increasing the percentage of material recovered and recycled.

Sensortronic 1000TRS Extract Fan – Trickle Speed with High Humidity or Pullcord Boost



Installation and Operation Instructions

Regency House
Kingsclere Park
Kingsclere
Newbury
Berkshire RG20 4SW

Tel: 01635 299266

www.ferrob.co.uk

FERROB
ENVIRONMENTAL SYSTEMS

INSTALLATION

THROUGH A WALL

1. It is recommended that the unit is installed not less than 1.75m from the floor and is not installed directly above a heat source. i.e. radiator etc.
2. Cut a 162mm diameter hole in the wall ensuring that the hole slopes slightly to the outside to prevent any water from running back into the sleeve.
3. Fit the plastic wall sleeve and drill, plug and screw the body of the fan into position ensuring that the sleeve is fitted over the fan spigot.
4. Place the external grille into position and then drill, plug and screw into place.

THROUGH A WINDOW

1. It is recommended that the unit is installed not less than 1.75m from the floor and is not installed directly above a heat source. i.e. radiator etc.
2. Cut a 185mm hole in the glass. (Double glazed windows will have to be replaced with the hole pre-cut by the window manufacturer.)
3. Using suitable screws, fix the fan body and the external window grille together ensuring that the rubber gasket supplied is fitted around the edges of both the grille and fan body.

THROUGH A CEILING

1. Cut a 162mm hole in the ceiling ensuring that the hole is central between joists.
2. Using suitable fasteners, fix the fan body into position over the hole.
3. Affix the ducting to the fan spigot.
4. Connect the other end of the ducting as required to a suitable outlet. (soffit grille etc)

Ferrob Ltd also recommends the fitting of a condensation trap when connected to a vertical run of ducting.

ELECTRICAL CONNECTION

All wiring must comply with the latest edition of the IEE wiring regulations. If in any doubt, contact a registered or approved electrician.

A means for disconnection from the supply having a contact separation of at least 3mm in all poles must be incorporated into the fixed wiring.

The unit is rated at a maximum power consumption of 20watts.

OPERATION

THE SENSORTRONIC 1000TRS EXTRACTOR FAN IS FITTED WITH A HIGHLY SENSITIVE SELF-CLEANING HUMIDITY SENSOR DESIGNED TO AUTOMATICALLY CONTROL CONDENSATION IN YOUR HOME.

1. When the power supply to the unit is switched on, the yellow light will FLASH which signifies that the unit is carrying-out a cleaning cycle. The unit will remain in this mode for approximately 5 minutes and will have a cleaning cycle every hour.
2. When the yellow light goes out, the fan will begin to run continuously on slow speed.
3. When the level of humidity being detected rises above the pre-set level of 65% Relative Humidity, the yellow light will come on and the fan will run on fast speed. Should your property have a severe condensation or humidity problem, the fan may run for long periods on fast speed until the level is brought down below the Relative Humidity pre-set level of 65%.
4. By gentle use of the pullcord, the fan can be made to run on full speed. At these times, the red light will be on.

