



The electrical equipment contained in this box should not be disposed of in unsorted municipal waste but collected separately. This is intended to reduce the impact on the environment by minimising the level of waste generated at the end of a product's useful life by increasing the percentage of material recovered and recycled.

UAX100 Low Voltage Extract Fan with Timer



Installation and Operation Instructions

Regency House
Kingsclere Park
Kingsclere
Newbury
Berkshire RG20 4SW

Tel: 01635 299266

www.ferrob.co.uk

FERROB
ENVIRONMENTAL SYSTEMS

INSTALLATION

In all installation cases, the remote transformer must be mounted outside of the bathroom \ toilet \ shower rooms. The fan unit can be installed above a bath or shower cubicle.

THROUGH A WALL

1. It is recommended that the unit is installed not less than 1.75m from the floor and is not installed directly above a heat source. i.e. radiator etc.
2. Cut a 107mm diameter hole in the wall ensuring that the hole slopes slightly to the outside to prevent any water from running back into the sleeve.
3. Fit the plastic wall sleeve and drill, plug and screw the body of the fan into position ensuring that the sleeve is fitted over the fan spigot.
4. Place the external grille into position and then drill, plug and screw into place.

THROUGH A WINDOW

1. It is recommended that the unit is installed not less than 1.75m from the floor and is not installed directly above a heat source. i.e. radiator etc.
2. Cut a 125mm hole in the glass. (Double glazed windows will have to be replaced with the hole pre-cut by the window manufacturer.)
3. Using the window kit (available separately) fix the kit to the window by screwing the internal mounting plate to the external grille ensuring the rubber gasket supplied is fixed around the edges of both the grille and plate. The fan can then be fixed to the mounting plate.

THROUGH A CEILING.

1. Cut a 107mm hole in the ceiling ensuring that the hole is central between joists.
2. Using suitable fasteners, fix the fan body into position over the hole.
3. Affix the ducting to the fan spigot.
4. Connect the other end of the ducting as required to a suitable outlet. (soffit grille etc)

ELECTRICAL CONNECTION

All wiring must comply with the latest edition of the IEE wiring regulations. If in any doubt, contact a registered or approved electrician.

A means for disconnection from the supply having a contact separation of at least 3mm in all poles must be incorporated into the fixed wiring.

The unit is rated at a maximum power consumption of 20watts.

OPERATION

THE UAX100 LOW VOLTAGE EXTRACTOR FAN IS FITTED WITH AN OVER-RUN TIMER.

1. When the power supply to the unit is switched on, it is immediately ready to be used.
2. If the fan has been wired to the room light, when the light is activated, the unit will run after 30 seconds.
3. It will continue to run after the light has been switched-off for 15 minutes.

Wiring Diagram for UAX100 Low Voltage T

