

# Micro 1007 Remote Humidity Controller.



## Installation and Operation Instructions

Regency House Kingsclere Park  
Kingsclere Newbury Berkshire  
RG20 4SW  
01635 299266  
[www.ferrob.co.uk](http://www.ferrob.co.uk)

FERROB LTD

## INSTALLATION

The installation of this remote unit enables an existing fan unit to be controlled using the unique Ferrob Self Cleaning Humidity Sensor.

1. Separate the two halves of the controller by removing the pattress screws.
2. Fix the pattress into position using suitable wall fasteners in a position near to the source of humidity. ( Do not fit directly above a cooker or other heat source. ) This is normally in a position between the 2 main sources of humidity in a kitchen, the sink and the cooker, and at a minimum height of 1.75 metres.
3. Disconnect the existing fan from its electrical supply.


### ELECTRICAL CONNECTION

All wiring must comply with the latest edition of the IEE wiring regulations. If in any doubt, contact a registered or approved electrician.

**A means for disconnection from the supply having a contact separation of at least 3mm in all poles must be incorporated into the fixed wiring.**

Connect the controller to the fan and to a mains supply with suitably rated cable.

Wiring Diagram for Sensortronic M1007

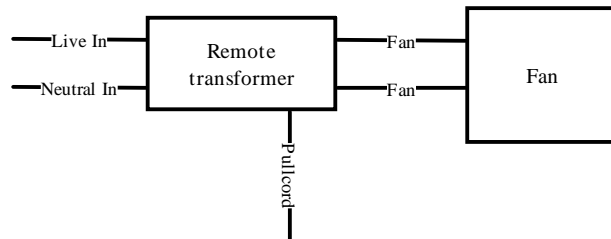

## OPERATION

THE SENSORTRONIC 1007 MICRO REMOTE CONTROLLER IS FITTED WITH A HIGHLY SENSITIVE SELF-CLEANING HUMIDITY SENSOR DESIGNED TO AUTOMATICALLY CONTROL CONDENSATION IN YOUR HOME.

1. When the power supply to the unit is switched on, the yellow light will flash which signifies that the unit is carrying-out a cleaning cycle. The unit will remain in this mode for approximately 5 minutes and will have a cleaning cycle every hour.
2. When the yellow light stops flashing, the fan will begin to detect the level of humidity.
3. When the level of humidity being detected rises above the pre-set level of 65% Relative Humidity, the yellow light will come on and the fan will start to run. Should your property have a severe condensation or humidity problem, it is normal operation for the fan to run for long periods until the level is brought down below the Relative Humidity pre-set level of 65%.
4. By gentle use of the pullcord, the fan can be made to run at times when it is not running on humidity. At these times, the red light will be on.

230V 50Hz  
Single Speed 20W  
IPX2 Rating

This Product is Double Insulated